


85607817 Service Kit For use with COATS 85607503 Quick Release Hub Nut

Parts Identification

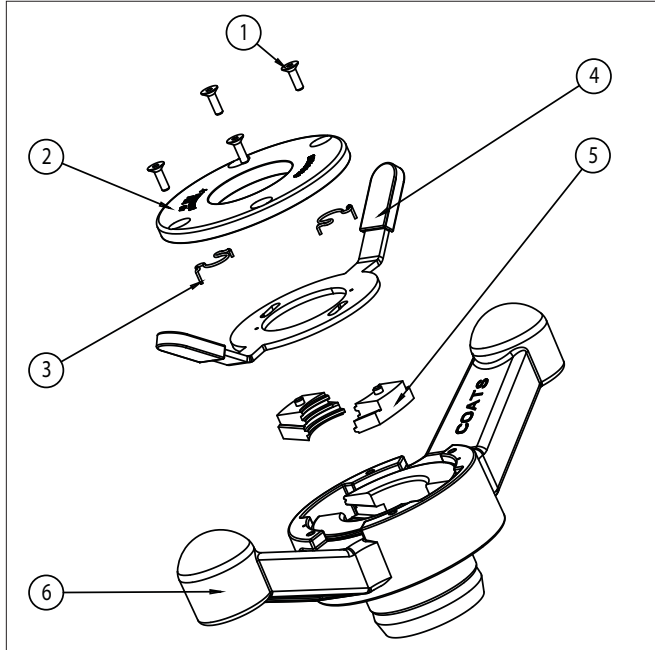

Item Description

1	0.7 x 12mm FHCS SCREW, M4
2	CAP
3	SPRING
4	ACTUATOR
5	THREADED INSERT
6	HUB NUT

Tools Needed:

- 2.5 mm Hex Key
- Needle Nose Pliers
- Grease
- Loctite® 242 Threadlocker

Instructions

- 1.** Use a 2.5 mm hex key and remove the four screws that fasten the CAP to the HUB NUT.
- 2.** Disassemble the two SPRINGS, ACTUATOR, and two THREADED INSERTS from the HUB NUT.
- 3.** Now using the new kit parts, assemble the two THREADED INSERTS, ACTUATOR, and two SPRINGS to the HUB NUT. Note that the long end of the SPRING goes into the HUB NUT and the short end goes into the ACTUATOR. Grease the ACTUATOR and THREADED INSERTS.
- 4.** Fasten the CAP to the HUB NUT using the supplied screws. Add some Loctite 242 threadlocker to the fasteners.